



# HP ProBook 4320t Keyboard Replacement Guide

Replace a malfunctioning keyboard or keyboard that's missing keys/cracked keys

Written By: Joshua



## INTRODUCTION

If your keys are sticky, missing, or otherwise broken, the keyboard may need replacing. The keyboard is also a necessary part to remove if one needs to get to any internal components.

---



### TOOLS:

- [Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery Removal



- Flip the laptop upside down and remove battery by pressing inward on the two latches holding the battery in.

## Step 2 — Screws



- Unscrew the four (2.5 mm Phillips) screws (Use Phillips #0 Screwdriver).



## Step 3 — Flip



- Flip laptop over and open it.

## Step 4 — Push N Lift



- Slightly push up while lifting up on the power button panel to release the panel.

## Step 5 — Unscrewing



- Unscrew the four (2.5 mm Phillips) screws holding the keyboard in (Use Phillips #0 Screwdriver).

## Step 6 — Careful Now



- Carefully (holding both sides of the keyboard), push up and lift slightly.
- ⚠ Keyboard is still connected via a ribbon cable.
- Move the keyboard slightly to the left to have access to the keyboard ribbon cable.

## Step 7 — Disconnect Wire



- Use the black spudger to lift the black latch holding the keyboard ribbon cable.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 02:30:58 AM.